

## CARE & MAINTENANCE

Do not use with water that is microbiologically unsafe or of unknown water quality without adequate disinfection before or after filtering.

Rated Capacity: **80 gallons (3 months)**


This filter has been tested according to NSF/ANSI Standard 42 & 53 for mouth-drawn bottles.

Independent testing was performed under standard laboratory conditions; actual performance may vary.

Filter is only to be used with cold water. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.



## FILTER CARTRIDGE Replacement Instructions

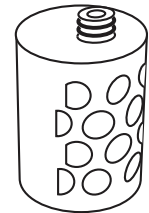

- Independent 3rd Party testing according to NSF/ANSI Standard 42 & 53
- For microbiological reduction, the filters were tested according to proprietary internal 3rd party test protocol

We're here to help! Our experts can guide you through your new system questions or concerns. Contact us directly at 866.662.6885 or support@aquasana.com.

See owner's manual for general installation conditions and needs as well as manufacturer's limited warranty.

Not all contaminants listed may be present in your water. Filter does not remove all contaminants that may be present in tap water.




## INSTRUCTIONS

**1** Remove used filter by firmly pulling filter down, away from lid.

**2** IMPORTANT: Soak new filter in tap water for 3-5 minutes.

**3** Attach new filter cartridge to lid.

**4** Screw lid tightly onto the bottle.

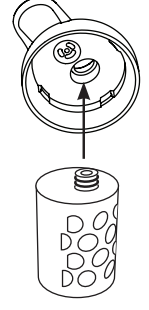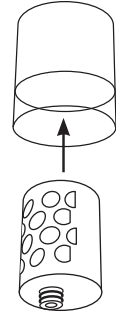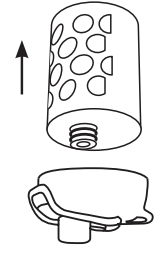

## PERFORMANCE DATA

Model	Replacement	Rated Capacity
AQ-PB; AQ-GB	AQ-FB-R	80 gallons

Contaminant	Overall Reduction (%)
Chlorine	99.4
Lead pH 8.5	99.8
Cyst	99.99
Class 1 Particulate	99.8
Bacteria	>99

aq\_filter\_replace\_20151004

**Aquasana, Inc.**  
 6310 Midway Road  
 Haltom City, Texas 76117  
 866.662.6885 USA  
 877.332.7873 Canada  
 www.aquasana.com

**Follow Us**  
 facebook.com/aquasana  
 twitter.com/aquasana